


# Mercedes NTG5 Wireless CarPlay installation diagram

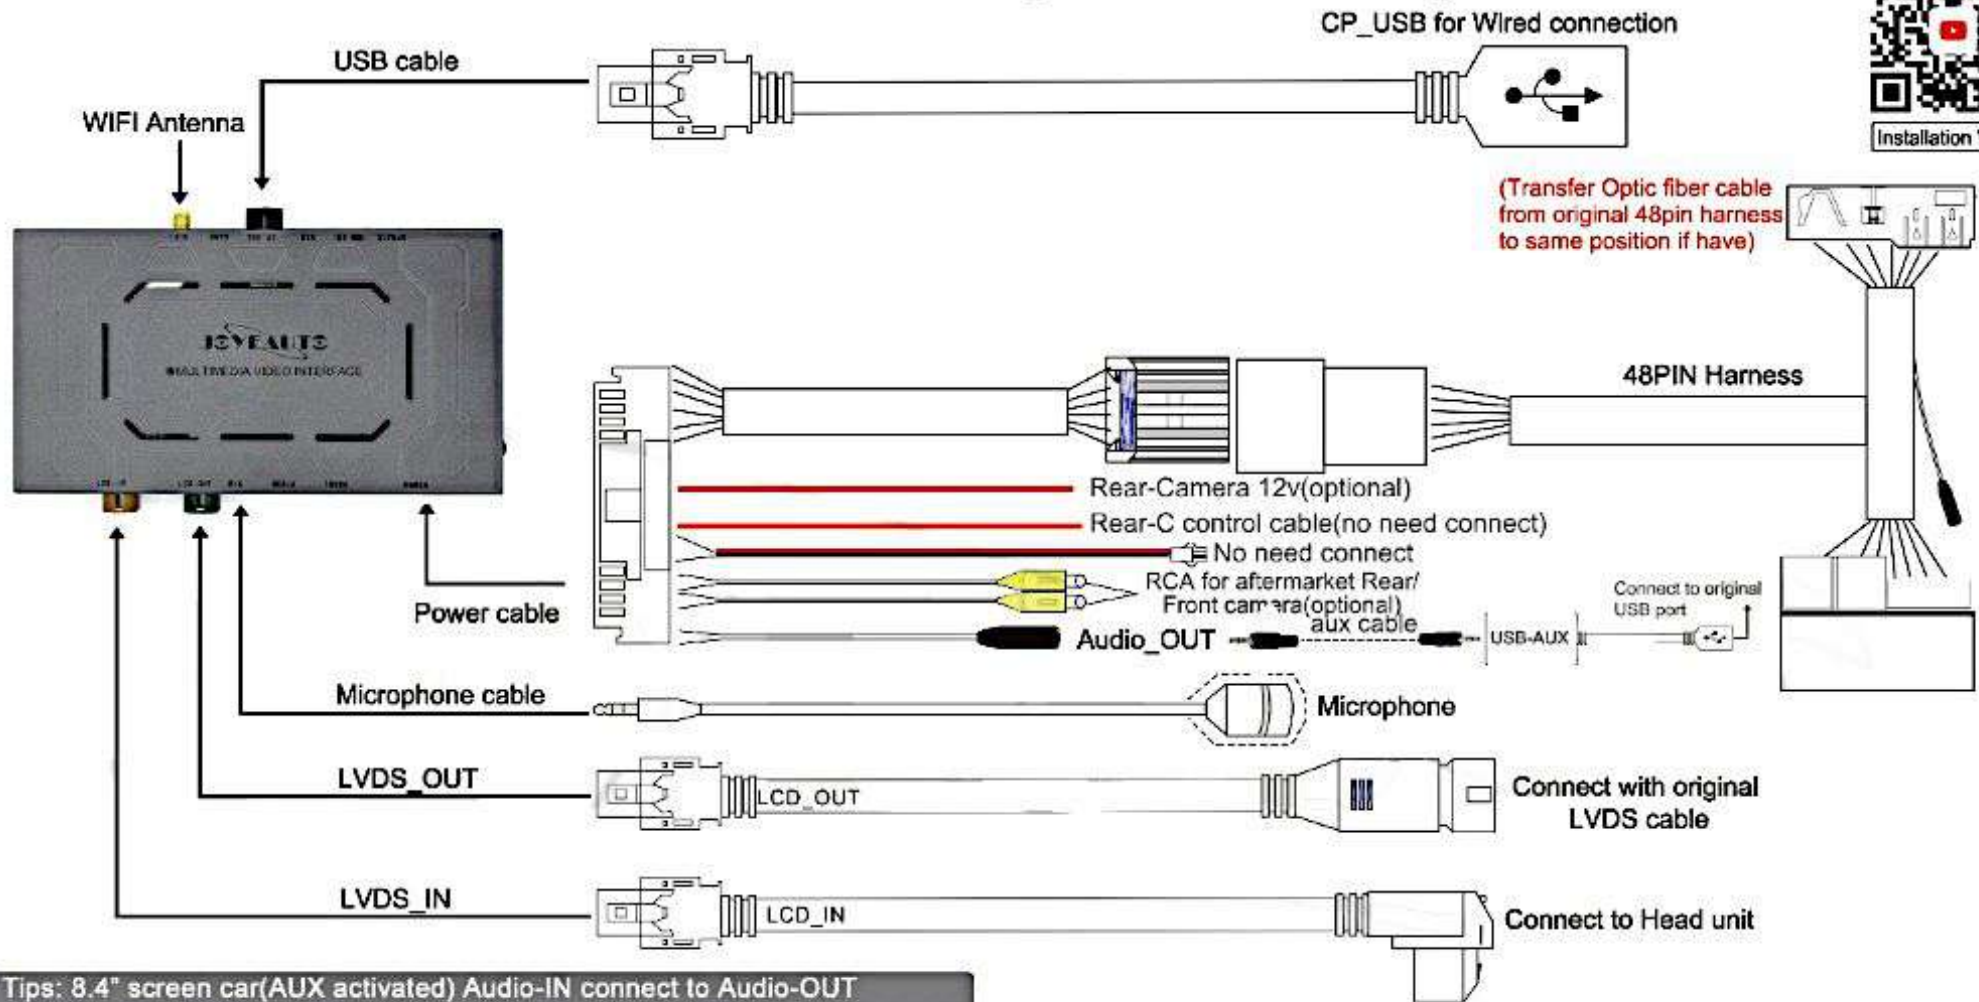

Installation Video



(Transfer Optic fiber cable from original 48pin harness to same position if have)

Tips: 8.4" screen car(AUX activated) Audio-IN connect to Audio-OUT  
7.2" screen car Audio-OUT connect to aux-usb adapter,ignore Audio-IN



Dip switch	Status	Description
1,2,3	ON OFF OFF	15-18 C/GLC 8.4"
	OFF OFF OFF	15-18 G/GLC 7.2
	OFF ON OFF	15-18 A/B/E/GLE.. 7"
	ON ON OFF	15-18 S class W222
	OFF ON ON	15-18 S W222(if flicker)
4	ON	Reverse guideline OFF
	OFF	Reverse guideline ON
8	ON	Original Rear camera
	OFF	Aftermarket Rear camera

5, 6, 7 no function, default OFF.

**Joystick knob controls**

**Press use Siri**

**Long press "back" swith to CarPlay,short press use return**

**Select AUX External before switch to CarPlay**